1 Quick Installation

1.1 Packing List



























1.2 Installation Spacing

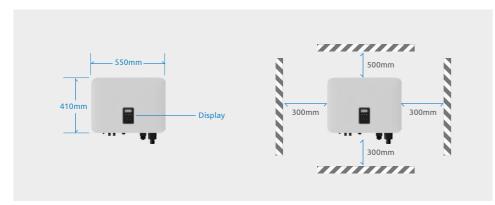

1.3 Mounting the Inverter

Use the wall bracket as the template to mark the position of 5 holes on the wall.

Use an electrical driller with 10mm diameter bit to drill 5 holes on the wall and make sure hole depth is 80mm.

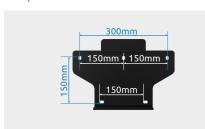




Insert the expansion tubes into the holes and tighten them, then fix the bracket onto the wall with expansion screws by using a cross screwdriver. Lift up the inverter with both hands, hang the back rail on the fixed wall bracket carefully.






1.4 Electrical Wiring Diagram

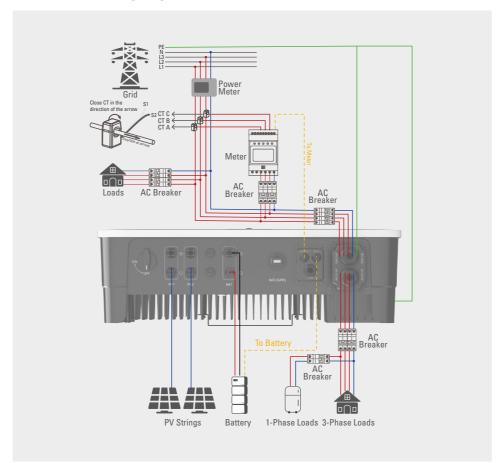

1.5 Ground Terminal Connection

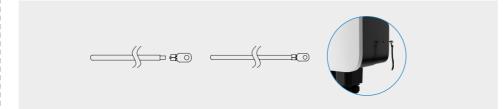

1.6 PV Connector Assembly Procedure and Connection

Cable type	Conductor cross-setional area (mm²)		
General	Scope (mm²)	Recommended value(mm²)	
photovoltaic cable	2.5-4.0	4.0	
2.5-4.0mm ² ① Strip off the o	Lenth:7mm able sheath 2	Crimping Plier Press the metal terminal	
③ Tighten the D	C connector 4	Insert the connectors	







QUICK INSTALLATION GUIDE

4~12kW - 3P Series Three Phase Storage Inverter




STROMHERZ SERVICE GLOBAL CONTACT

Adress: Nordex Holding LP, 272 Bath Street, Glasgow, Scotland, G2 4JR, Nordex


info@stromherz.at +44 20 7692 8949

1.7 Inverter Battery Connector Assembly Procedure

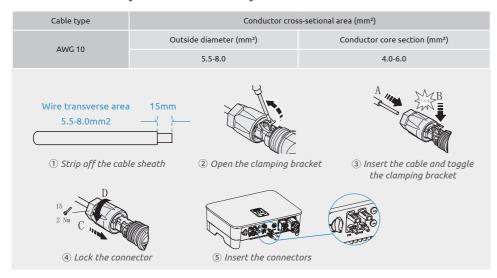

1.8 AC Output Connector Connection


Model	S-4KTL	S-5KTL	S-6KTL	S-8KTL	S-10KTL	S-12KTL
Outside diameter (mm)	12-18	12-18	12-18	12-18	12-18	12-18
Conductor core section(mm²)	2.5-10	2.5-10	2.5-10	3.2-10	4-10	6-10
Breaker (A)	20	20	20	32	32	40

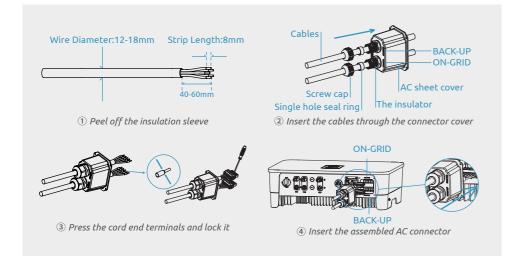


1.9 CT and Meter Connection

No.	Definition	Function	CTC C		
1	L1	L1/L2/L3/N connect to grid to detect power grid voltage	CT A CB		
2	L2		grid to detect power grid	•••••	
3	L3				
4	N		House orid		
5	L1-S1		AC Breaker		
6	L1-S2	Connect CT to detect current	CT A connected to L1 CT B connected to L2		
7	L2-S1		CT C connected to L3		
8	L2-S2		current	A PARTY OF THE PAR	
9	L3-S1				outsonic outwork
10	L3-S2				
12	L	Power supplied from 220V grid	General Genera		
13	N		1		
RS485	RS485	Communicate with inverter	13 ¹² 4 ³² 1 RS485 56789 21 10		

1.10 Inverter Communication Connection

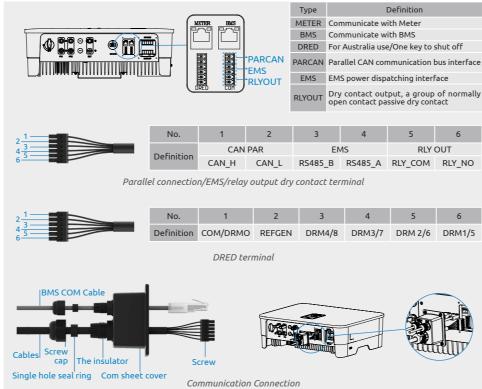

1.11 Monitoring Device Installation

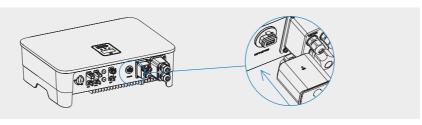

2 WiFi Module Configuration Guide

2.1 WiFi module configuration.

A. Insert the WiFi module into the COM port at the bottom of the inverter and power on the inverter, and the indicator on the module is off now.

 \boldsymbol{B}_{\star} Prepare a laptop or Smartphone and turn on the WLAN connection.


C. Search for the WiFi name WiFi-AP******** which released by the module (*represents the last 8 numbers of the data logger SN) and click the WiFi name.

D. WiFi connection succeeded as shown on the right.

Con Con Con Con Con Control Co

2.2 Open the browser and browse 10.10.100.254

You will see the following picture, input the username and password "admin" and click "Sign in".

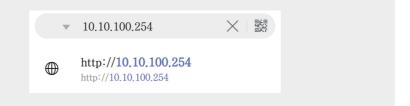



2.3 You will enter the interface "System".

Note: Click the "German/English" in the upper right corner to switch the interface language.



2.4 Click "STA Setting" to enter the WiFi configuration interface, and click "Scan" a list of WiFi network will show up.



2.5 Select the WiFi that you are going to connect and click "OK".

Note: Only support 2.412GHz-2.484GHz router at present.



2.6 Now, a notice will pop-up and reminds you to input the WiFi password, click "OK".



2.7 Input the password in the blank and click "Save".

Prote: Password is case sensitive.



2.8 The system will show "Saved Successfully!", click "Restart" to complete the WiFi configuration.



 ${\bf 2.9}~After~the~configuration~succeeded,~the~indicator~on~the~WiFi~module~will~be~always~on.$



4